

Complete, Easy To Read INSTALLATION AND OPERATING INSTRUCTIONS

A2203

SYSTEM POWERED, NON-PROGRAMMABLE DIGITAL HEAT & COOL THERMOSTATS

I M P O R T A N T !

Please read all instructions carefully before beginning installation and save for future reference. Before removing any wiring from your existing thermostat, the wires must be labeled with their terminal designations. Ignore the color of the wires since they may not comply with any standard.

Thank you for your confidence in our product. You should become fully acquainted with this thermostat before installing it for usage. Follow the installation procedures carefully, and one step at a time. This will save you time and minimize the chance of damaging either the thermostat or the systems that it controls. These instructions may contain information beyond that required for your particular installation. Please save these instructions for future reference.

COMPATIBILITY

•The multi-stage A2203 thermostat can be used with most 24 volt, 2 stage heat and/or 2 stage cool: gas, oil, or electric heating and air conditioning systems, single-stage heat pump, or single-stage heat pump with Aux heating systems.

•These thermostats cannot be used to control gas Millivolt heating systems, multi-stage heat pumps, or 120/240 volt (line voltage) heating or cooling systems. Ask your dealer for other thermostats to control those systems.

FEATURES



- Digital, Non-Programmable
- System Powered Only
- Set Temperature Range 45°F to 95°F
- Clean, Attractive Design
- Easy To Install
- Gas / Electric Blower Fan Option
- Large, Easy To Read Display with LED Backlight
- F / C Selectable Temperature Display
- Fixed 4 Minute Minimum Delay For Compressor Protection

INSTALLATION

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE BEGINNING INSTALLATION.

CAUTION :

This thermostat is protected against normal static electric discharges. However, in extremely dry weather you should touch a grounded metal object before touching the thermostat to minimize the risk of causing damage to the unit.

TOOLS REQUIRED:

- #1 Phillips screwdriver (small - medium)
- Drill with 3/16-in. (4.8mm) drill bit
- Wire stripper/cutter



CAUTION :

Turn off electricity to the appliance before installing or servicing the thermostat or any part of the system. Do not turn the electricity back on until the work is completed.

- Your thermostat is a precision instrument. Please handle it with care.
- Do not short (jumper) across the electric terminals on either the furnace or air conditioner to test the system. This may damage the thermostat and void your warranty.
- All wiring must conform to all applicable local codes and ordinances.
- This thermostat should be limited to a maximum of 3 amps; higher current may cause damage to the thermostat.

THERMOSTAT LOCATION:

On replacement installations, mount the new thermostat in place of the old one unless the conditions listed below suggest otherwise. On new installations, follow the guidelines listed below.

1. Locate the thermostat on an inside wall, at about 5 ft. (1.5m) above the floor, and in a room that is used often.
2. Do not install it where there are unusual heating conditions, such as: direct sunlight, near a lamp, television, radiator, register, fireplace, on a wall opposite a stove, or that carries hot water pipes.
3. Do not locate in unusual cooling conditions, such as: on a wall separating an unheated room, or in a draft from a stairwell, door, or window.
4. Do not locate where air circulation is poor, such as: in a corner or alcove, or behind an open door.
5. Do not locate in a damp area. This can lead to corrosion that may shorten thermostat life.
6. Do not install the unit until all construction work and painting has been completed.

REMOVING THE OLD THERMOSTAT:

1. Switch OFF the electricity to both the furnace and air conditioner; then proceed with the following:
2. Remove cover from old thermostat. Most are snap-on types and simply pull off, some have screws on the sides, and these must be loosened first.
3. Take note the letters printed near the wire terminals. Attach labels (enclosed) to each wire for identification by terminal letter, not color.
4. Make sure the wires do not fall back inside the wall, and remove and label one wire at a time. Do not allow wires to touch each other or any parts of the thermostat.
5. Loosen all screws on the old thermostat and/or base, and remove it from the wall.

CAUTION :

Be careful not to drop the body or disturb any of the electronic parts.

MOUNTING THE NEW THERMOSTAT:

1. Strip insulation leaving 3/8 in. (9.5mm) of bare wire on the ends and clean off any corrosion present.
2. Fill the wall opening with non-combustible insulation to prevent drafts from affecting the thermostat while in use.
3. Pull your new thermostat apart by applying pressure to the thumb tab on the bottom edge of the unit. While pressure is being applied to this release latch, pull the two halves of the thermostat apart near the bottom edge.
4. Hold the base against the wall. Route the wires through the larger hole adjacent to the terminal block. Position the base for best appearance (to hide any marks from an old thermostat). Attach the base to the wall with the four screws provided.

NOTE: If you are mounting the base to a soft material like plasterboard, or if you are using the old mounting holes, the screws may not hold. Drill a 3/16-in (4.8mm) hole at each screw location, and insert the plastic anchors provided. Then mount the base as described below.

CONNECTING THE WIRES:

5. Clean bare wire ends must be inserted terminal block and the brass terminal as shown here.
6. Securely tighten all electrical terminal screws (even unused ones).



WIRING INFORMATION

**** Complete heating or cooling system wiring can be found in the WIRE IDENTIFICATION AND WIRING SCHEMATICS section of this instruction sheet. The schematics shown provide component information for brand new installations or for un-referenced wires.**

SETUP OPTIONS

A table similar to this one shown below is printed on the thermostat's circuit board. There may be minor differences present in some of the wording of your specific model, but the function of each option will be the same.

Jumper	JP1	JP2	JP3	JP4	JP5	JP6	JP7	JP8	JP9	JP10
ON <input type="checkbox"/>	HP-AUX ONLY	RC-RH CONCTED	A	Y1	HEAT PUMP	GAS HEAT	ELECT HEAT	B	O	Fahrenheit DISPLAY
OFF <input type="checkbox"/>	NORMAL	RC-RH SEPERATE	NO A	NO Y1	NORMAL	NO FAN	NO FAN	NO B	NO O	Celcius DISPLAY
Factory Default	OFF <input type="checkbox"/>	ON <input type="checkbox"/>	OFF <input type="checkbox"/>	ON <input type="checkbox"/>	OFF <input type="checkbox"/>	OFF <input type="checkbox"/>	ON <input type="checkbox"/>	ON <input type="checkbox"/>	OFF <input type="checkbox"/>	ON <input type="checkbox"/>

JUMPER SETTINGS:

There are ten (10) headers (or jumpers) located inside the thermostat at the rear of the circuit board. These settings can be changed from their default values by removing its corresponding black jumper cap and reinstalling the cap so that it is positioned on the adjacent pair of metal pins. A change to ANY of the jumper settings will not be recognized until power to the thermostat is removed, and then power is restored again. This can simply be accomplished by removing the thermostat from the wired back plate. Each of these jumpers changes a different setup option. The choices for these options are listed in a table printed on the circuit board, and are also printed adjacent to each individual setting jumper.

JP1 - HP-AUX ONLY:

If you have a heat pump with auxiliary heat, and the heat pump is not working, you can use the auxiliary heat only by moving jumper 1 (heat pump) to jumper position 1 (Aux only).

JP2 - RC-RH CONNECTED OR SEPERATED:

This setting controls whether the HVAC Power is single or RH-RC is separated.

JP3&JP4 - [A] OR [Y1] TERMINAL USAGE OPTION:

This setting determines how the thermostat will use the shared Y1/A terminal connection on the back plate. Choose the Jumper 3 (A) position to have the Y1/A terminal powered while in heat mode, and un-powered while in cool and off modes. Choose the Jumper 4 (Y1) position to have the Y1/A terminal powered while in cool mode, and un-powered while in heat and off modes.

JP5 - HEAT PUMP OR NORMAL:

This setting determines whether the system is heat-pump or normal.

JP6&JP7 - GAS / ELECTRIC FAN OPERATION:

This setting changes whether the system's blower fan (if applicable) is controlled by the thermostat in HEAT mode. Choose JP7(ELECT) if you have electric heating, and require the thermostat to control the fan. Choose JP6(GAS) if you have a gas heating system, this will allow the furnace itself to control the operation of the blower fan. In the HEAT PUMP system, you also should choose JP7(ELECT).

NOTE: If you have an Electric Heat system and the blower does not operate after installation, locate the "Gas/Electric" option jumper and ensure that it is in the "Electric" position.

JP8&JP9 - [B] OR [O] TERMINAL USAGE OPTION:

This setting determines how the thermostat will use the shared B/O terminal connection on the back plate. Choose the Jumper 8 (B) position to have the B/O terminal powered while in heat mode, and un-powered while in cool and off modes. Choose the Jumper 9 (O) position to have the B/O terminal powered while in cool mode, and un-powered while in heat and off modes.

JP10 - FAHRENHEIT OR CELSIUS DISPLAY FORMAT:

This setting controls whether the temperature is shown in degrees FAHRENHEIT or CELSIUS on the LCD display screen.

COMPLETING THE INSTALLATION

Install your new thermostat onto its base. To do this, start with the bottom tilted

out towards you at first, and line up the two holes in the top of the thermostat with the two hooks on the top of the back plate. Slowly pivot the bottom of the thermostat towards the back plate and push firmly on the bottom half of the thermostat until it is securely latched to the back plate. If the two thermostat halves do not latch easily, remove and try again. Do not attempt to force them together.

NOTE: Before use, remove the plastic film (if present) that is protecting the LCD display screen.

Turn the electrical power back ON to both your heating and/or air conditioning systems. Verify that both systems (and the blower fan if used) are operating properly. When set to a high temperature, the heating system should provide warm air after a short time in Heat Mode. Likewise, a cooling system should provide cool air after a short time when set to a low temperature in Cool Mode. Usually, sound from the furnace and/or air conditioning units can be heard while either is running. If your system uses a blower fan, the rush of moving air should be heard within a short time after either has been started. Your installation is now complete.

FRONT PANEL ITEMS

SYSTEM MODE SWITCH:

The MODE switch has three positions: HEAT, OFF, and COOL. In the winter, set the mode switch to HEAT to control your heating system; in the summer, set the switch to COOL to control your air conditioning.

In the spring and fall, or when the windows are open, you can set the switch OFF.

NOTE: When the system mode switch is in the OFF position, it is normal for the system's blower fan ("G" terminal if used) to still become activated depending upon the position of the FAN mode switch (see below).

FAN MODE SWITCH:

The FAN switch has two positions: ON and AUTO.

- In the ON position, the system's blower fan will be commanded ON, and remain ON while the FAN switch is in the ON position (this also includes when the System Mode Switch is in the OFF position).
- When the FAN switch is In the AUTO position, the operation of the blower fan is determined only by the on/off cycling of the heating and cooling systems.

NOTE: The FAN switch only works if your system provides a wire for the thermostat's "G" terminal.

PUSH BUTTONS:

There are three push buttons in the middle of the unit's display screen. "UP" and "DOWN" buttons are used to adjust the set point temperature. "F" button is used to monitor the filter.

FILTER MONITOR

Your thermostat also keeps a record of the number of hours your filter has been in use. To maximize your system's performance and energy efficiency, change or clear your filter regularly.

When the total system run time for heat and cool reaches 400 hours, you need clean or change your system's filter, "FILT" will continue to flash until the counter is set back to zero.

Under the Filter count screen. Press and hold F for 3 seconds to reset the FILTER counter. The display will blink, and counters will be cleared to zero.

OPERATING INSTRUCTIONS

TEMPERATURE ADJUSTMENT:

While in HEAT or COOL mode, a single press on either the UP or DOWN button causes the word "TEMP SET" to appear on the screen. Once "TEMP SET" is present, the set point temperature can be altered by pressing either the UP or DOWN button once per degree (FAHRENHEIT) of change.

If there is a large thermal demand present which is greater than the first stage of heating (W1) or cooling (Y1) can accommodate for, then a second stage of heating (W2) or cooling (Y2) will be activated.

When the second stage of either heating or cooling becomes active, the word "AUX" will be shown on the display screen.

TEMPERATURE LIMIT STOPS:

There are two independent set temperature stops: a Maximum Heat Set

Temperature, and a Minimum Cool Set Temperature. Each of these temperature stops is user adjustable in one-degree (FAHRENHEIT) increments. The heat limit stop prevents the set temperature from being adjusted higher than the heat limit setting. The cool limit stop prevents the set temperature from being adjusted lower than the cool limit setting.

To set the heat and cool set temperature limit stops through the configuration menu.

In the "SET HEAT", to adjust the maximum heat set temperature, In the "SET COOL", to adjust the minimum cool set temperature. While in the adjustment mode for each of the temperature stops, use the UP and DOWN buttons to adjust the limit value, just as you would for adjusting the set temperature under normal operation.

NOTE: If no buttons are pressed, the thermostat will accept the limit value that was on the screen, and return to normal operating mode.

DISPLAY ILLUMINATION:

Pressing either set temperature button will illuminate the display for easier viewing in dim light conditions. The light will remain on for approximately 7 seconds. While the light is illuminated, pressing any of the three push buttons will continue the lighting and remain on for approximately 7 more seconds.

MINIMUM OFF TIME:

This thermostat provides a 4 minutes delay after shutting off before it can be restarted. This feature will prevent damage to your compressor caused by rapid cycling. It does not prevent a rapid compressor restart due to short power outages.

CONFIGURATION MENU

Make sure the System Switch is set to OFF, Press "F" button and hold at least 3 seconds.

Press Button	Displayed	Factory Default	Press up or down key to select	Comments
F	SPAN1	2	1,3	One stage span
F	SPAN2	2	1,3	Two stage span
F	TEMP	0	±9	Temperature Display Offset
F	SET HEAT	95	45-95	Set heat the high limit
F	SET COOL	45	45-95	Set cool the low limit
F	Back to main display			

TROUBLESHOOTING

Problem	Solution
No Display	1. Check power connections .
Auto Fan Does Not Turn On Properly.	1. Move Gas/Elect Jumper to correct position.
Heating or Cooling Does Not Go On or Off.	1. Check that the function switch is in the correct position ("HEAT" or "COOL").
	2. There may be as much as 4-minute delay before the system turns On – wait and check.
	3. Check your circuit breakers and switches to ensure there is power to the system.
	4. Make sure your furnace blower door is closed properly.
	5. If you have single-stage heat pump, be sure set the jumper 5
If unit continues to operate in the Off position.	1. Replace unit.

TECHNICAL ASSISTANCE

If you have any problems installing or using this thermostat, please carefully and thoroughly review the instruction manual. If you require assistance, please contact our Technical Assistance Department.

WIRING DIAGRAM

Jumper Figure 1

 



Figure1

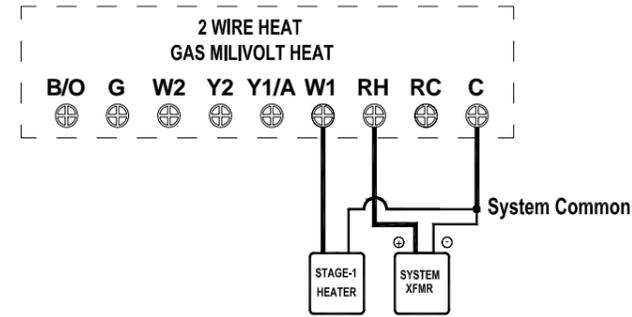

Jumper Figure 2

 



Figure2

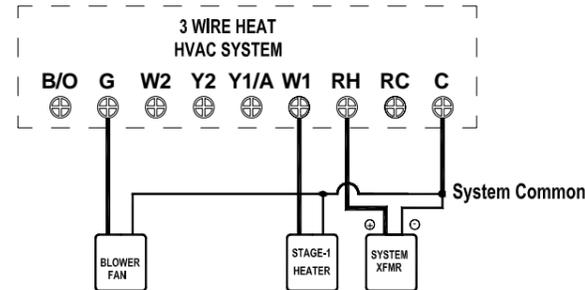

Jumper Figure 3


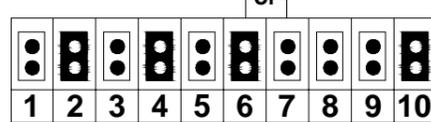


Figure3

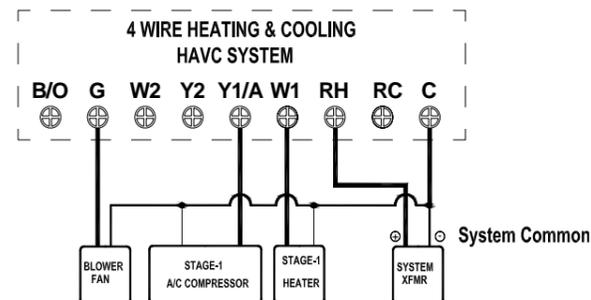

Jumper Figure 4

 



Figure4

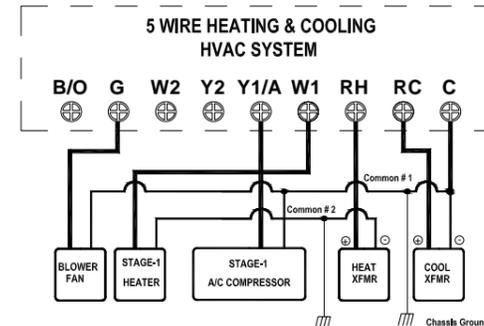

Jumper Figure 5

 



Figure5

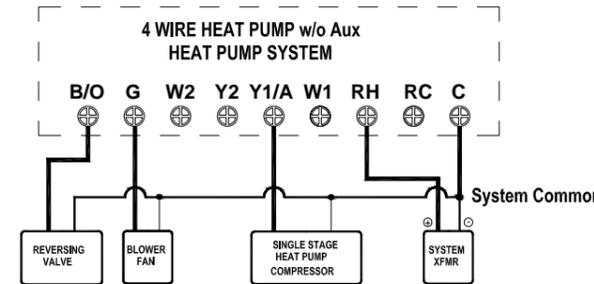

Jumper Figure 6

 



Figure6

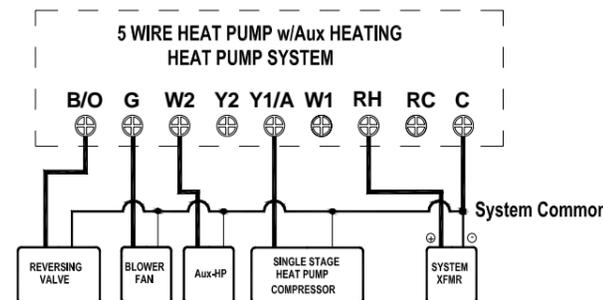

Jumper Figure 7

 



Figure7

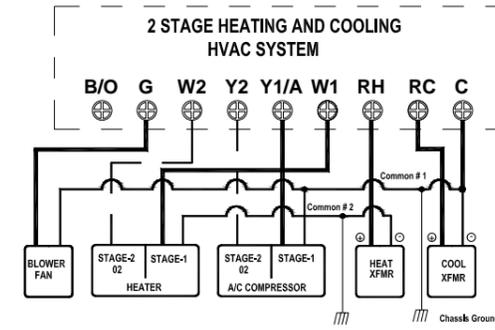

Jumper Figure 8

 



Figure8

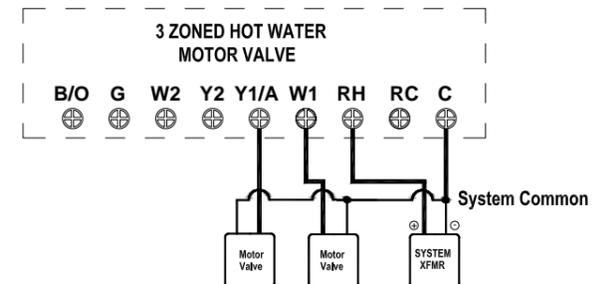

WIRING DIAGRAM NOTES:

1. The BOLD lines are what you should be connecting to the terminals on this new thermostat.
2. The DASHED lines are optional depending upon your system type.
3. In many cases, the thin lines shown as "SYSTEM COMMON" will not be visible at the thermostat location, they are located with your heating and cooling equipment.
4. For Heat Pumps, use the "B" or "O" wire, NOT BOTH. Typically neither are used in a conventional system.
5. If "Y" and "C" wires are both present, then "C" is a common wire.
6. If you have a "B" wire in your system which is used as a common wire, connecting it to the "B/O" terminal on this thermostat may damage your system and/or the thermostat.